

Will Earth's Flame Fit in My Fireplace?


Earth's Flame is adjustable to fit most 36" – 42" fireplaces. This appliance has specific sizing requirements for safe operation and may not fit or operate safely in all code compliant fireplace systems. Please review all the requirements listed below **PRIOR** to purchase or installation. Complete operating/installation instructions and safety precautions are included with your purchase of Earth's Flame. If you are unsure of how to properly take these measurements we recommend that you contact a F.I.R.E. Certified Inspector (www.gotoFIRE.com) or equally qualified hearth professional.

Earth's Flame is not recommended for installation in the following fireplaces:

<u>Fireplace</u>	<u>Reason</u>
Lennox RD & RDI Series	The damper mechanism conflicts with Earth's Flame

Minimum Required Fireplace Floor - Width and Depth


The back wall of the fireplace must be greater than 18" across. The depth of the floor measured from the back wall must be greater than 13 1/2". The width of the floor measured 12 1/2" from the back wall must be greater than 26" wide.

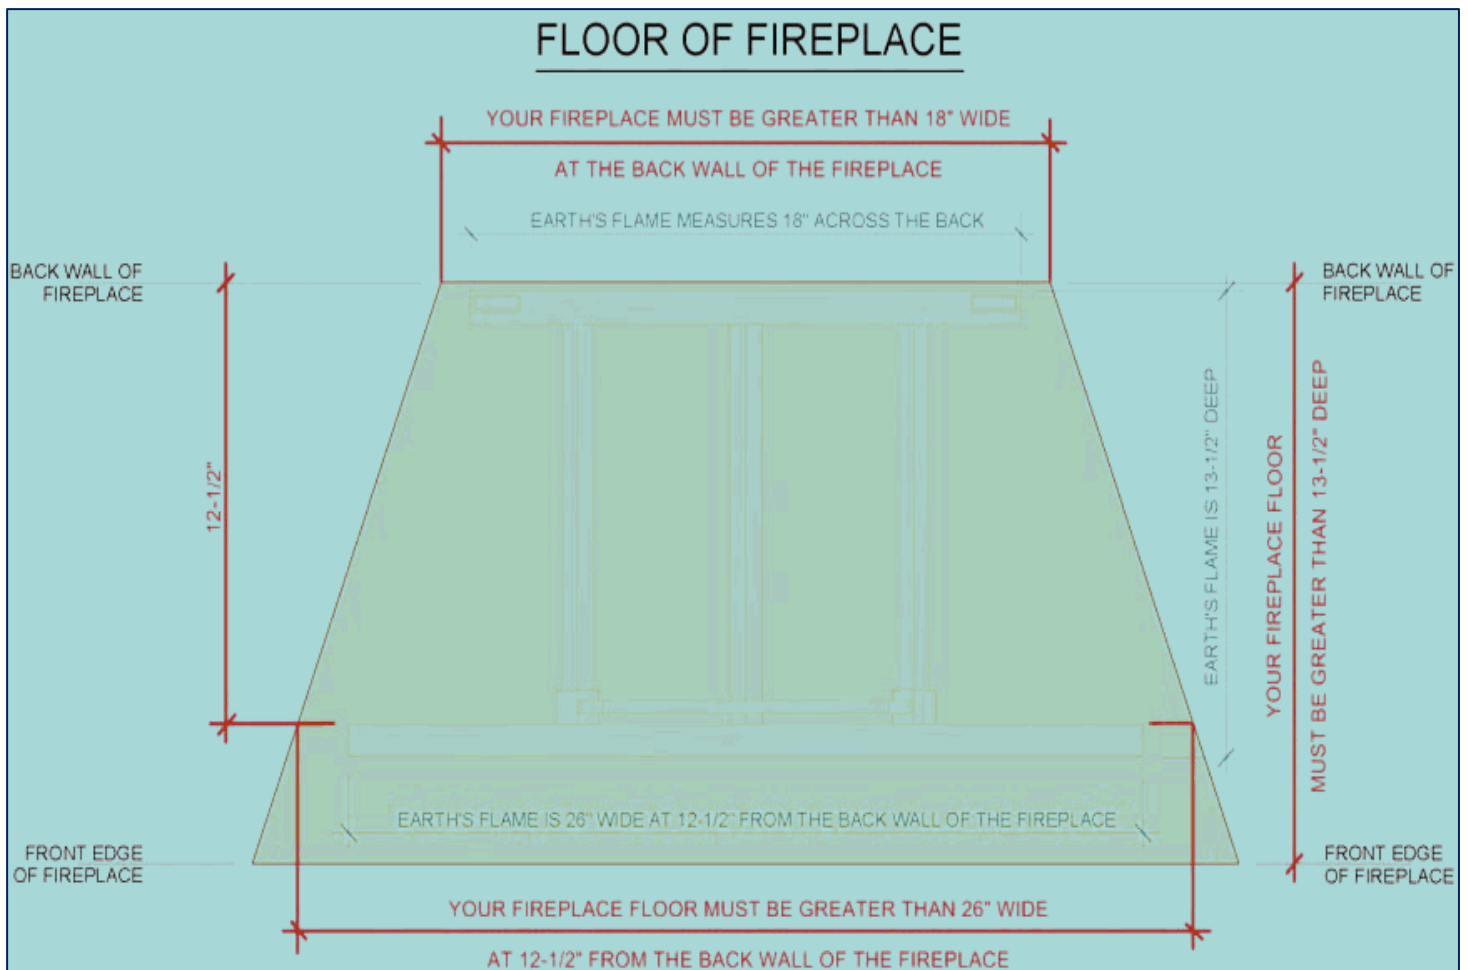


Minimum Fireplace Height and Configuration

Please determine the TYPE of fireplace system in which you intend to install this accessory within based on the images listed below. Please be accurate on your assessment and choice of product.


MASONRY/CONCRETE
FIREPLACE

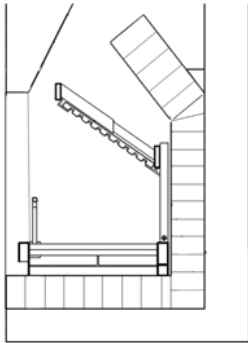


OLDER FACTORY BUILT
FIREPLACE

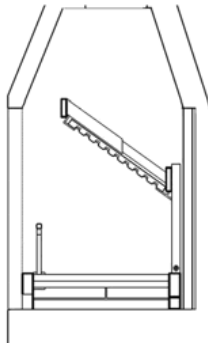


NEWER FACTORY BUILT
FIREPLACE

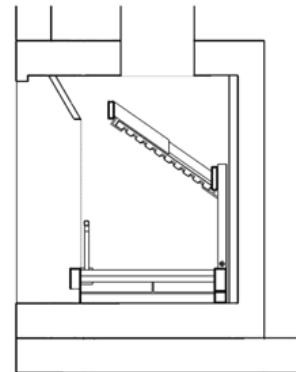


All fireplace openings must have a clear measurement of 13" or greater in height. This includes all clearances from the fireplace breast, smoke shield or any other obstruction. The inside depth of the firebox must be a minimum 8 1/2" as measured from the leading edge of the breast or smoke shield to the back wall of the fireplace as shown below.

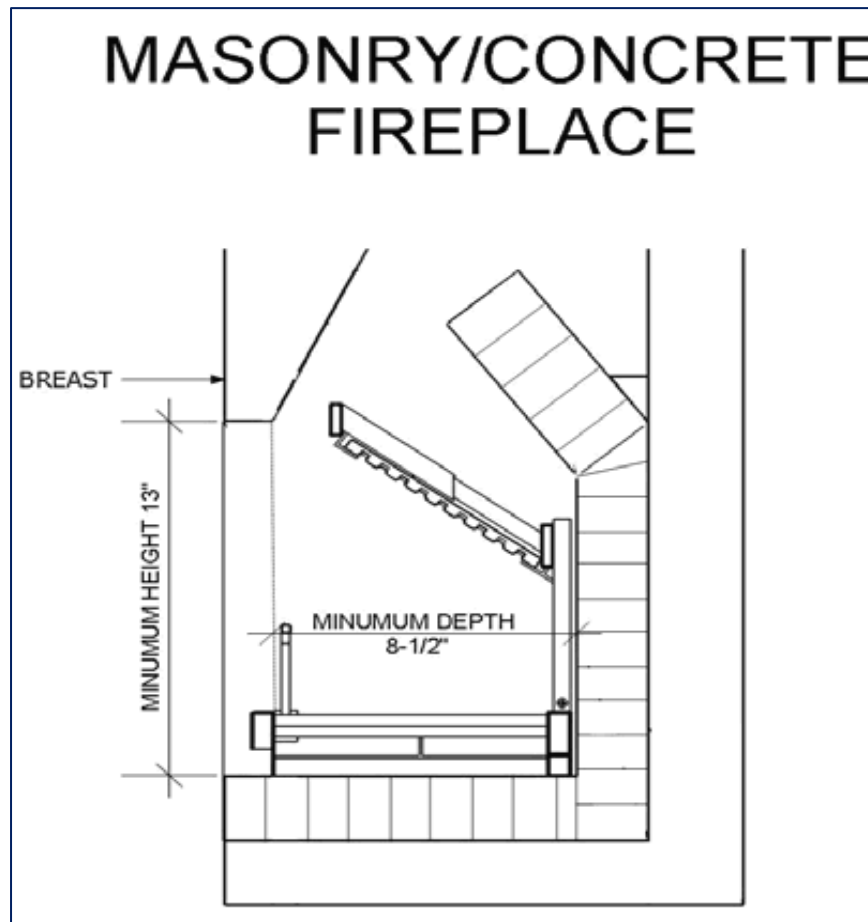

OLDER FACTORY BUILT FIREPLACE

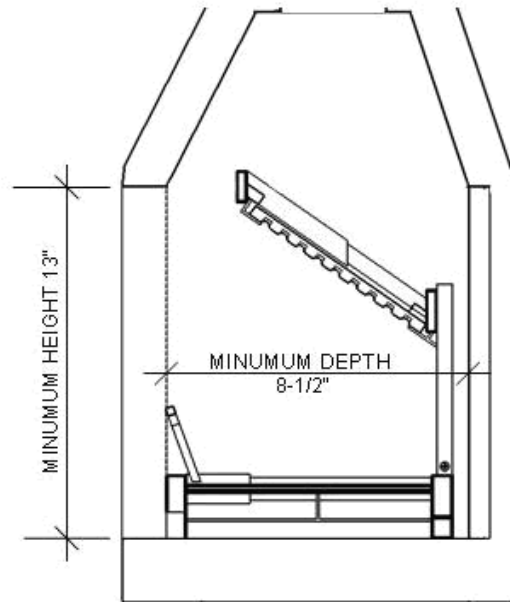

NEWER FACTORY BUILT FIREPLACE

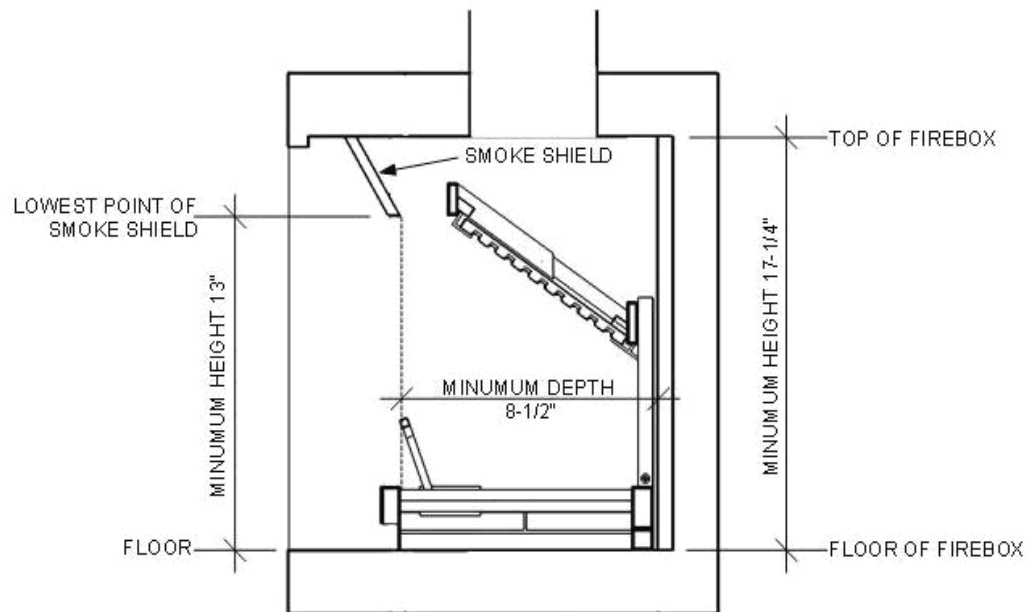

Newer Factory-Built Design

For newer factory built fireplaces with a low or flat dome design, the minimum dimensions should also include 17 ¼" measured from the floor to the top of the firebox as shown below.

Do not install this accessory in a low or flat dome factory built fireplace that has a drop down damper system or any other type mechanical obstruction (as shown below) that may result in redirection of flame.



Earth's Flame, Inc.
440 E Harrison street Corona, CA 92879
www.earthsflyme.com Phone & Fax 888-201-8805